



important. This guide does not replace the installation manual. Visit **www.berryalloc.com** for the complete installation instructions.

- 1 Carefully read the instructions prior to installation.
- **2** Let the floor acclimatise for at least 48 hours in the room where the installation will take place.
- **3** Check your subfloor to avoid squeaking noises or locking separation.
- a The subfloor must be hard, dry, clean, and even (max +/- 2 mm per 2 m).
- **b** A sharp difference must be sanded down, and any holes should be filled.
- 4 When installing a floor:
- a Use the right tools and accessories to achieve the best result. E.g. tapping block, wedges, ruler, pencil, and a rubber mallet.
- **b** We recommend to open several packages of flooring to sort the planks to give a nice flow or variation in the design according to your preference when installing.

- **5** When installing a floor with a pre-attached underlay, the compressive strength of any extra underlay should be at least 30 tons/m² (300 kPa).
- **6** When installing the floor on top of underfloor heating (like heating foil/mats or water-borne), make sure to check the compressive strength. Use reinforcement if necessary to comply with our installation guidelines.



BerryAlloc tapping block

During installation.

- 1 This floor must be installed as a floating floor.
 Please make sure to respect the following guidelines:
- **a** The distance between the floor and the wall or fixed points:

High pressure floor: 4 mm Laminate: 8 – 10 mm

TIP Feel free to lift the wall panels so the floor is free to expand underneath.

- Use skirting that is at least 14 mm thick (laminate: 12 mm)
 TIP In order to create a perfect corner joint with your skirting, make sure the clips are attached to the skirting when cutting at an angle.
- T-profiles and transition profiles must be used when transitioning to a new room. You can find more information available in the installation guide.
 TIP BerryAlloc has matching skirtings and T-profiles for most decors.

d Do not screw, glue, or wedge the floor so that it becomes immobile. Movement is important. When grouting, use Fillertwine (bottom filling strip) to avoid locking the floor into place.

2 Kitchen appliances, counters, islands, and fixed installations should not be installed on top of the laminate floor. The floor should be installed alongside the skirting.

3 The distance between joints should be at least one-third of a floorboard's length.

4 When installing underfloor heating, do not exceed 60 W / m². Surface temperature should reach no higher than 27 °C. Keep in mind that carpets and flooring mats can increase the surface temperature.

5 For high pressure floors, make sure to use a moisture barrier (0.20 mm) underneath the floor when installing underfloor heating, and/or when installing

on a concrete surface. Lay the plastic so there's a 20 cm overlap and tape into place. For laminate, we recommend using a BerryAlloc underlay with pre-attached moisture barrier.

6 Remove the old skirting and measure the room, perpendicular to the direction of the flooring you plan on laying. Make sure the last row is at least 5 cm wide. If this is not the case, adjust the width of the first row.

7 When deciding on the direction to lay the floor in, keep the following in mind:

- a The longitudinal direction of the room
- **b** Light input from windows
- c Longitudinal direction of the roof Select the laying direction that is in accordance with at least two of the above points.


8 Inspect all floorboards for visible defects. Do this in optimal lighting conditions, both before and during installation. Floor planks with visible damage must not be used.



Installation manual available on www.berryalloc.com

important.

This guide does not replace the installation manual. Visit **www.berryalloc.com** for the complete installation instructions.

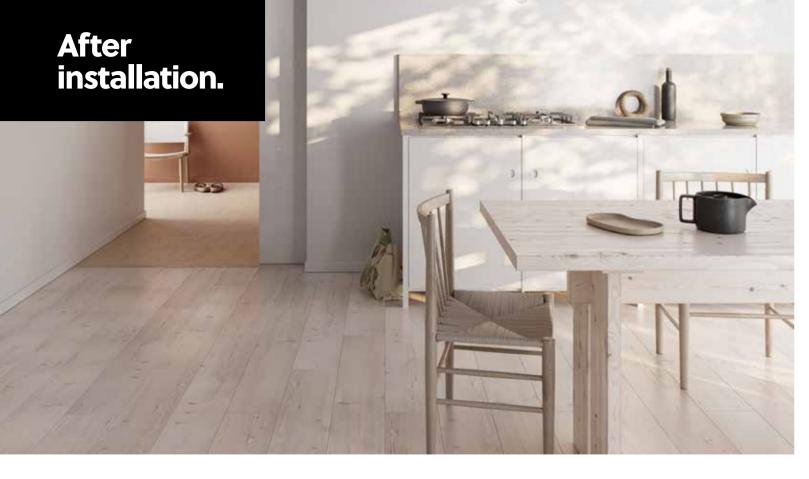

important. This guide does not replace the installation manual. Visit **www.berryalloc.com** for the complete installation instructions.

- 1 Monitor the humidity in the room. This can be done with tools such as a hygrometer. The humidity level should remain between 40 60%. If the humidity falls below 30%, the floor can shrink up to 1 mm per metre, and in some cases more than 1 mm.

 TIP if you're experiencing low humidity, you can increase it with the use of a humidifier.
- **2** We recommend sticking felt pads underneath sofa, table, and chair legs.
- **3** If you have underfloor heating, do not cover the floor with mats that have a rubber layer. Mats and rugs insulate heat, which could damage the floor.
- **4** When starting up your underfloor heating, make sure the temperature rises gradually. It should never exceed 27 °C.

- 5 Maintain your floor by using our BerryAlloc Cleaner and high-quality microfibre cleaning products. If you choose to use a steam cleaner (only for high pressure floors), use one with a function to wash wooden floors. Do not use soft soap. For day-to-day maintenance, we recommend using a vacuum cleaner or dry mop. For more information, visit www.berryalloc.com.
- **6** If the surface of your floor gets damaged, contact your local dealer, who can provide you with a repair kit.





Alloc AS

Fiboveien 26 4580 Lyngdal, Norway T +47 38 34 22 00 info@berryalloc.com

www.berryalloc.com