


Use instructions for the SOPPEC DRIVER™ trolley



1- Unlock the screw on the back and keep it in the hand.

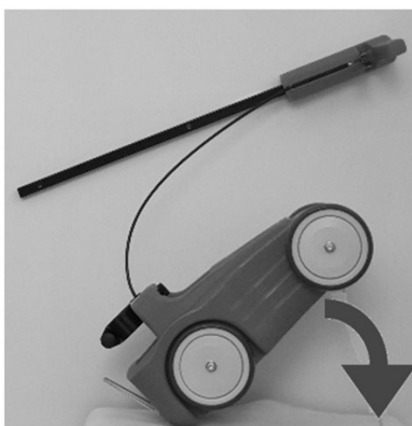


2- Swing the trolley back on its 4 wheels and the handle-bar onto the top side of the DRIVER™ with the handle facing backwards.



3- Insert the handle-bar vertically and push it **firmly** into its cradle on the trolley.



4- Swing the handle-bar backwards.

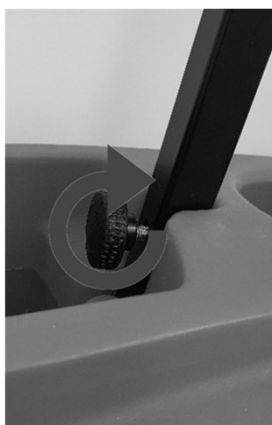

5- Set-up and screw the fixing screw in position.



6- Shake the can, head-down, to free-up the internal balls. Keep going-on during 30 seconds minimum.




7- Unscrew the aerosol collar holder to ease the insertion of the paint can.




8- Insert the Tracing PRO can vertically until the Soppec PureSPRAY™ nozzle is positioned into the spray activation module.




8- Pivot the Tracing PRO aerosol can 90° on both the right and the left sides until you can hear the « Click » which assesses the proper set-up of the nozzle into the spray activation module.

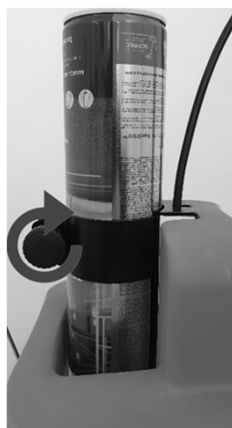

9- Tighten firmly the button-screw of the aerosol holder collar.

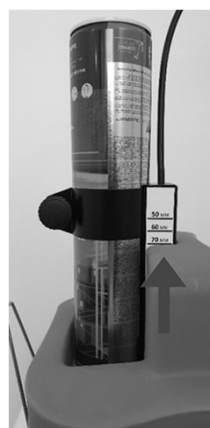

10- Set-up the line width by adjusting the height of the aerosol holder with the button-screw on the back of the sliding bar.

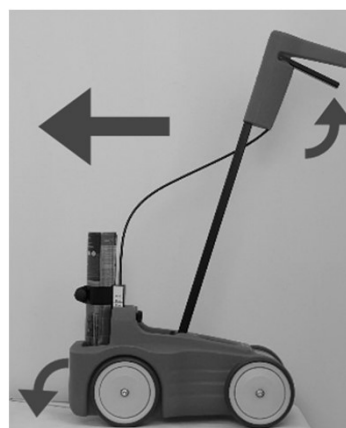

11- Swing the marking target into position, line-up on the chalk line or the existing line, press on the trigger and start your marking. Your pace should be at 30 seconds for 10 meters.