


SHOWER TRAYS INSTRUCTION

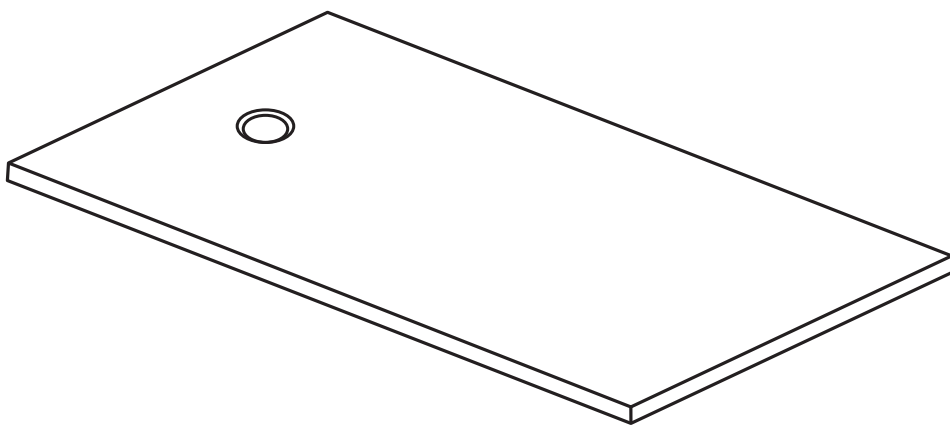


EN Installation Instruction


FR Instructions de montage

ES Instrucciones de montaje

DO NOT INSTALL THIS SHOWER TRAY AGAINST THE WALL IF FLANGE IS NOT ATTACHED!


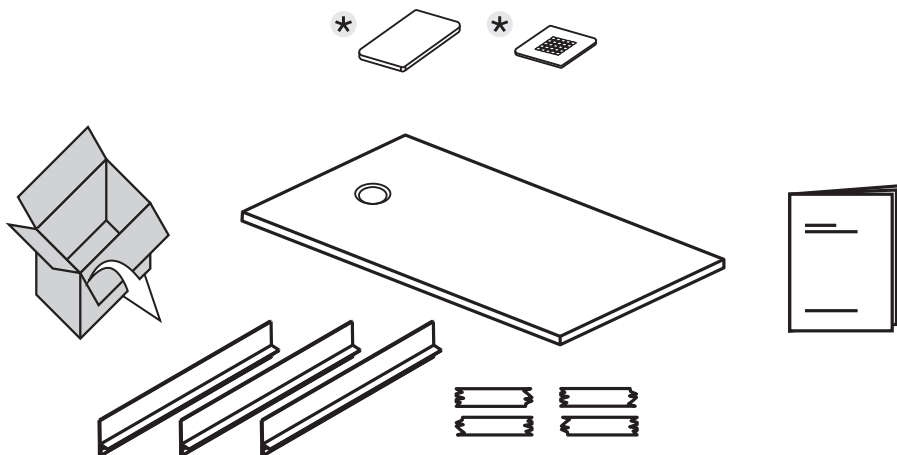


* with selected models / avec des modèles sélectionnés / con modelos seleccionados

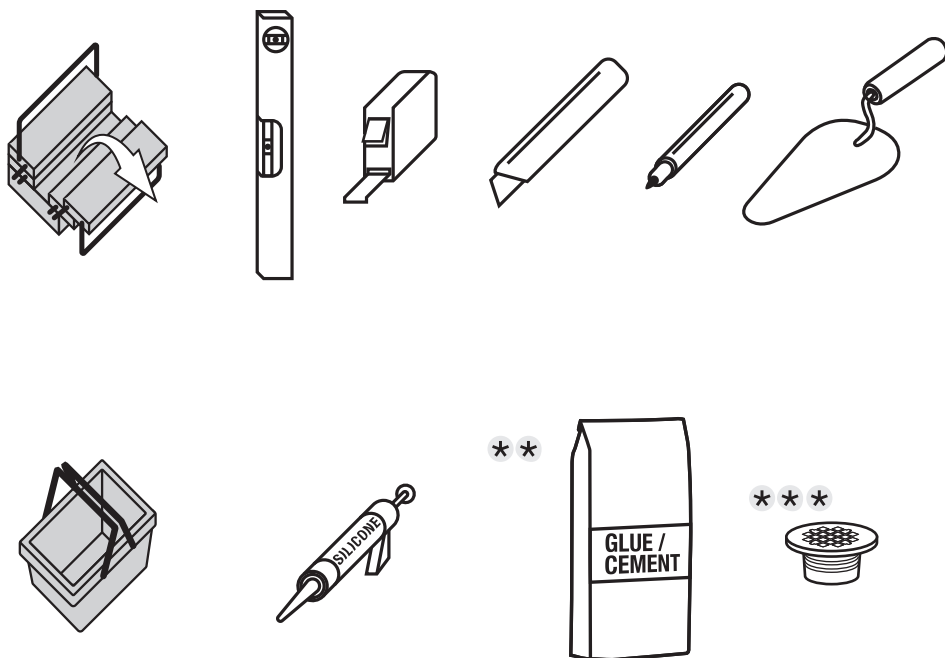


** Tile glue or cement / Colle à carrelage ou ciment / Pagamento de azulejos o cemento
 *** Recommended drains for 2" connection (not included) / Drains recommandés pour raccord de drain de 2" (non inclus) /
 Desagües recomendados para conexión de 2" (no incluidos): Signature Hardware PVC SKU: 418113,
 Signature Hardware PVC SKU: 418117, OS&B: SD35-CP – ABS, OS&B: SD5135-CP – PVC, OS&B: SD22 – BRASS


1

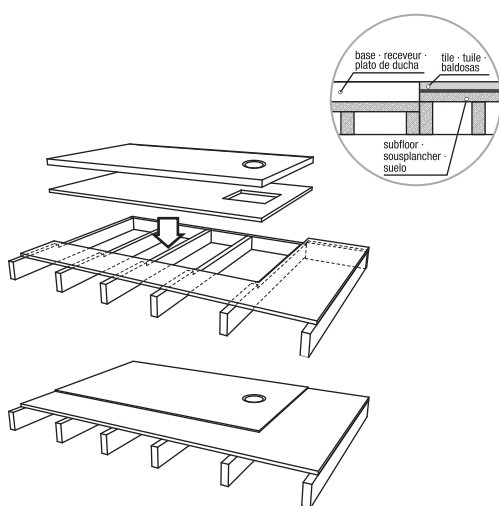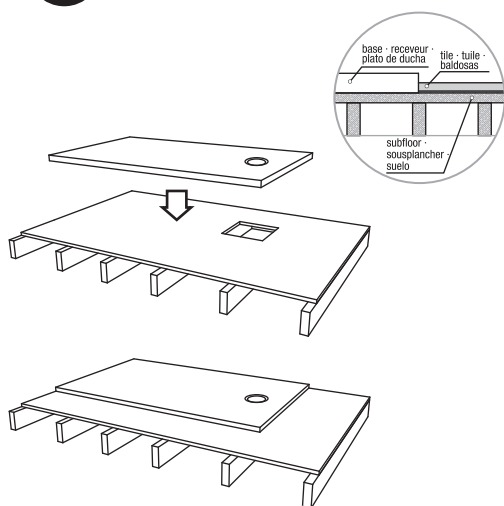

2

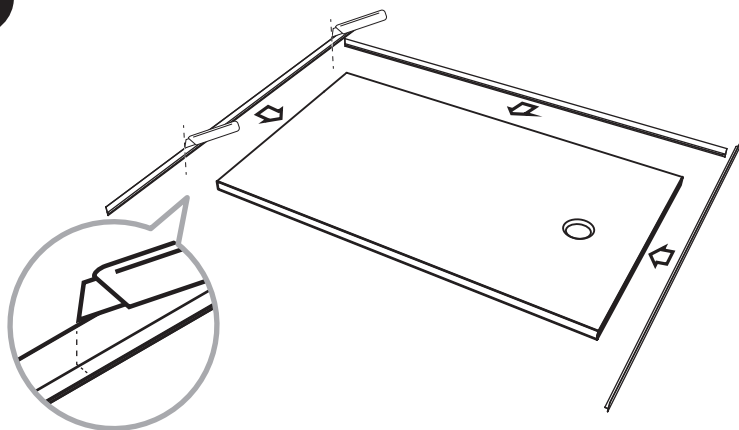


3

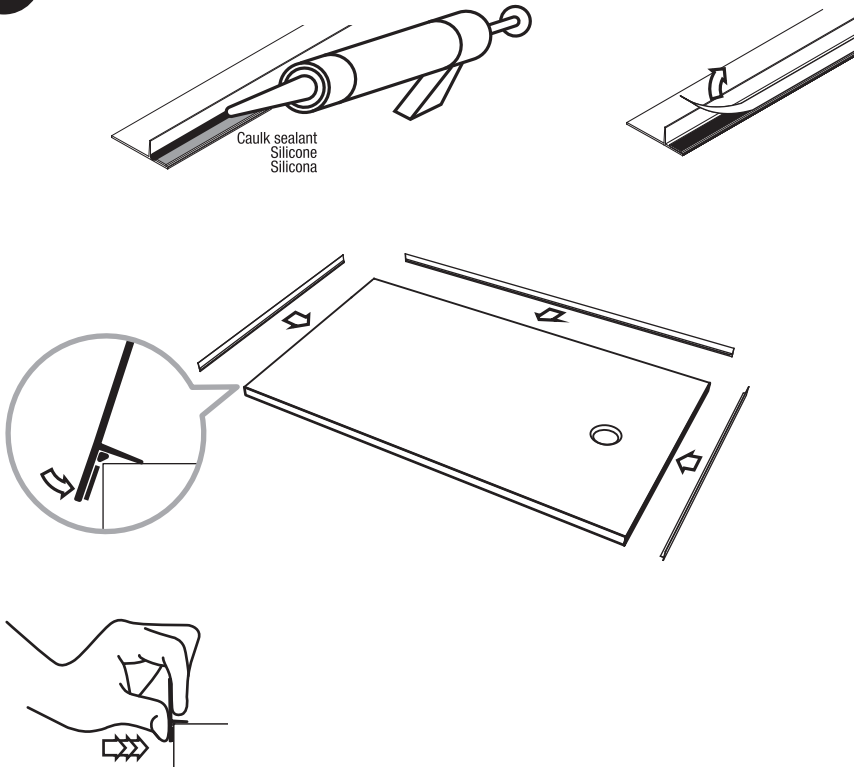


When onsite installation. / Si on installe onsite. / Si instalación en obra.

4

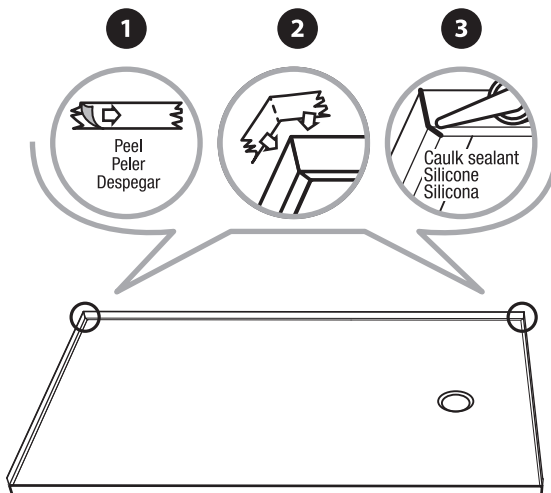


When onsite installation. / Si on installe onsite. / Si instalación en obra.



5

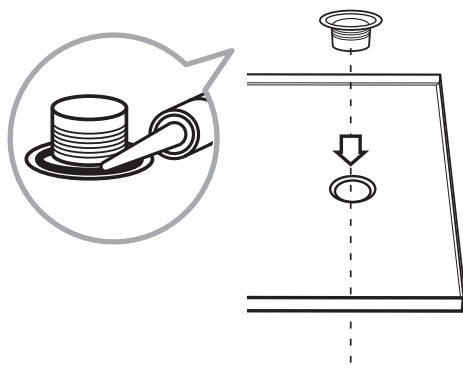


6

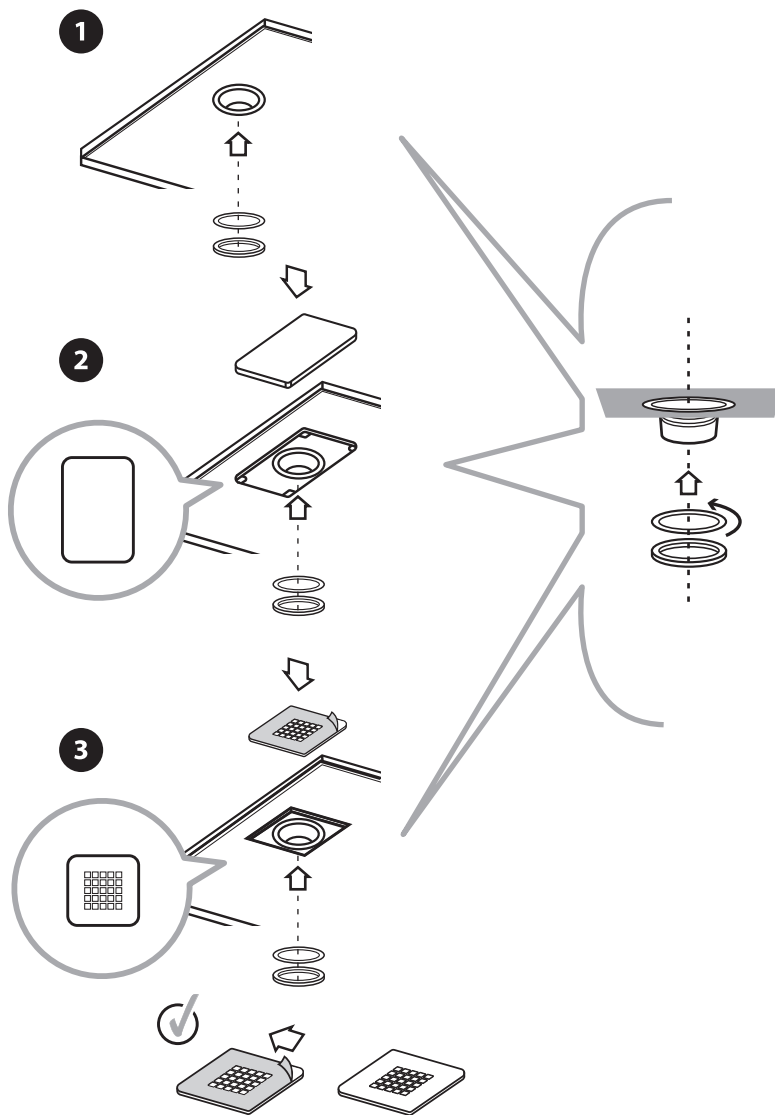


7

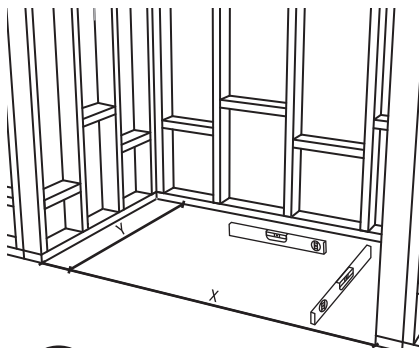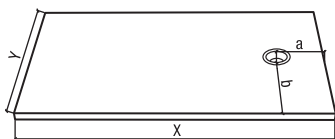



8a

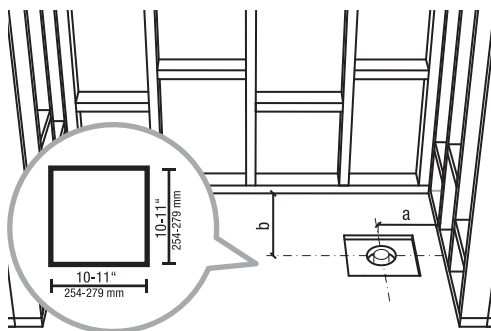


8b

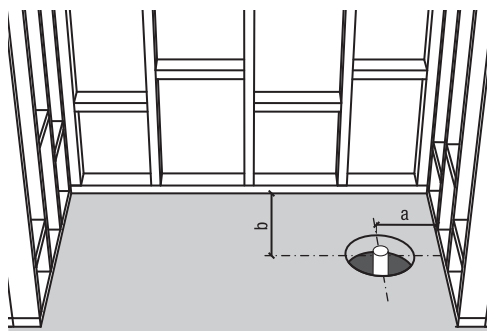


9

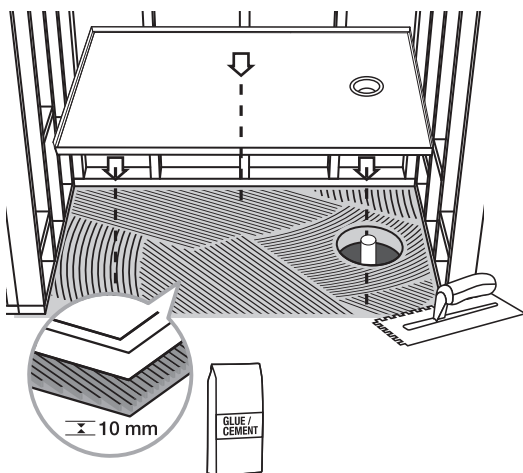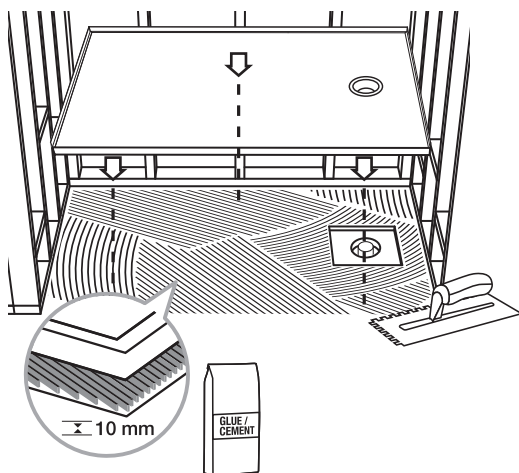

10

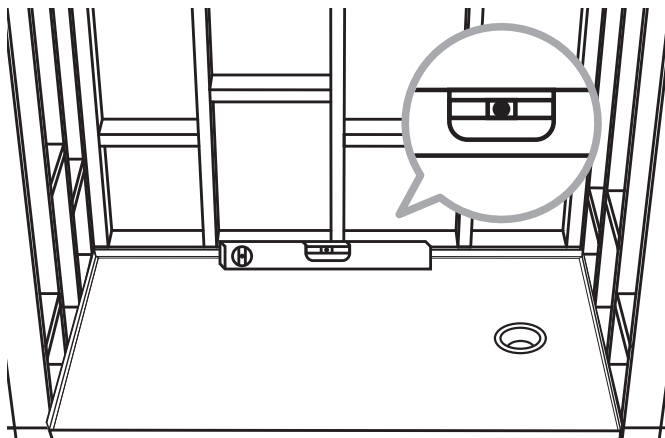

11

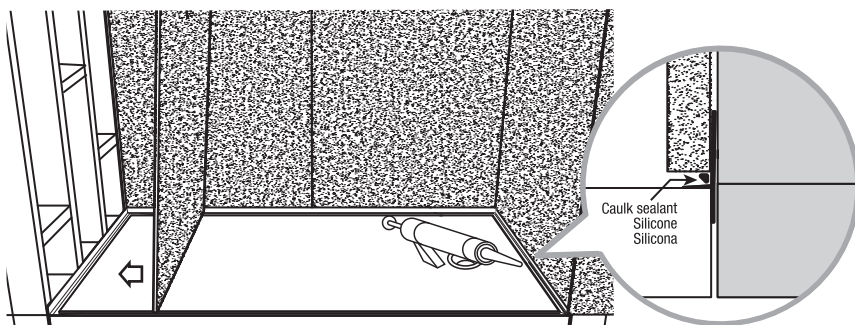

12

