

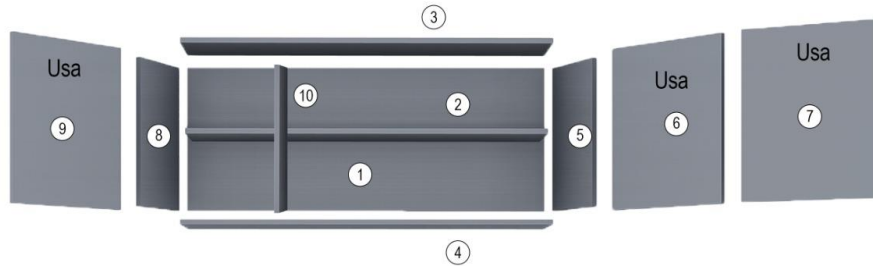


Corp Bucatarie Mini

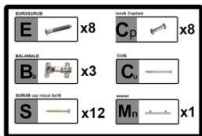

Montaj Corpuri Superioare

1. Se fixeaza placa de jos si placa de sus de laterali si intermediari cu eurosurub.
2. Se prinde spatele din MDF cu cuie.
3. Se introduc suportii de polita in laterali si intermediari.
4. Se fixeaza balamalele pe usi cu S1 (3X18) dupa care se monteaza pe laterali cu S1 (3X18)
5. Se fixeaza telescoapele de laterali si usi cu S1 unde este cazul
6. Se pun manerele cu suruburile lor aferente

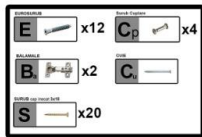

ATENTIE

Montajul necorespunzator atrage
dupa sine pierderea garantiei!

IDEM se procedeaza pentru celelalte corpuri!