






INSTRUCTIUNI MONTAJ CABINA DE DUS OVALA




OVAL SHOWER ENCLOSURE
INSTALLATION GUIDE

M • A • G • N • A

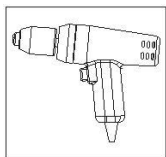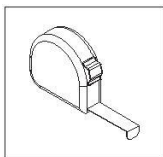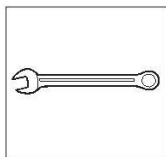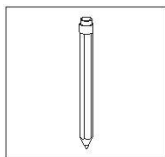
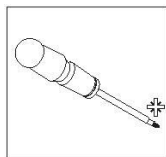


**A 1**

4.2 x 3245B

**4x****A 2**








M4*10






**4x****A 3****4x****A 4**

3,9x8,5


**12x****A 5**

3,5x38

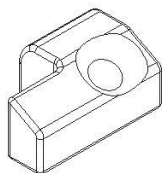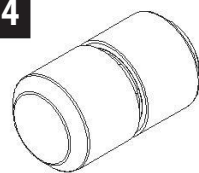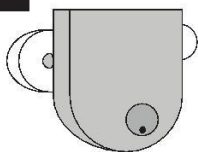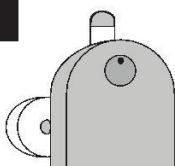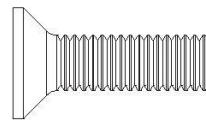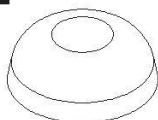**8x****B 1****2x****B 2****4x****B 3****2x****B 4****2x****C 1****4x****C 2****4x****C 3****4x****C 4****4x****D 2****2x****B 5****8x**

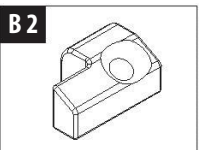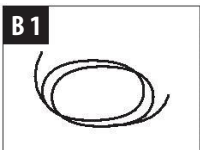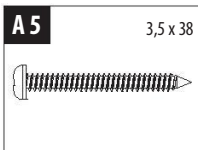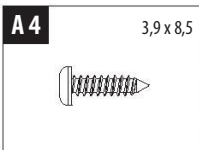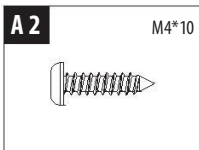

A1 4.2 x 3245B



A3



