

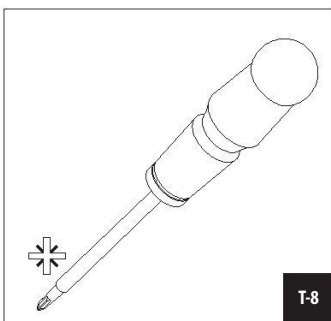
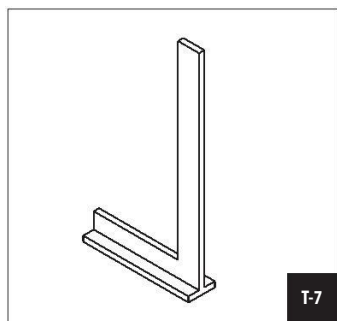
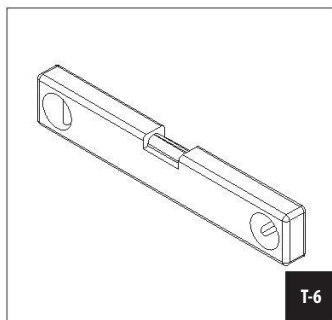
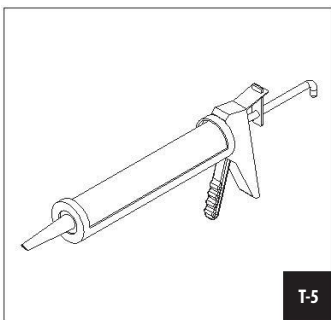
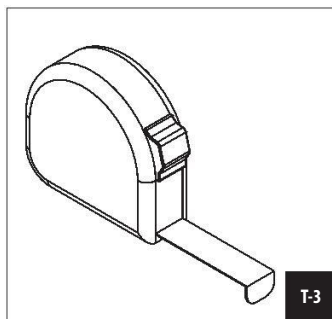




INSTRUCTIUNI MONTAJ
CADITA DE DUS
PATRATA

INSTALLATION GUIDE
SHOWER TRAY

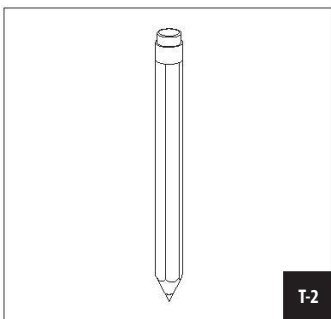

M • A • G • N • A

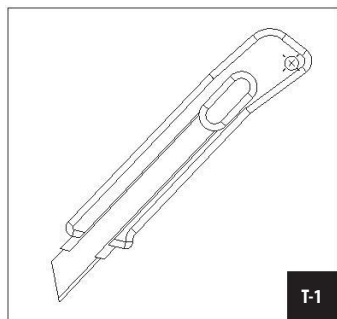

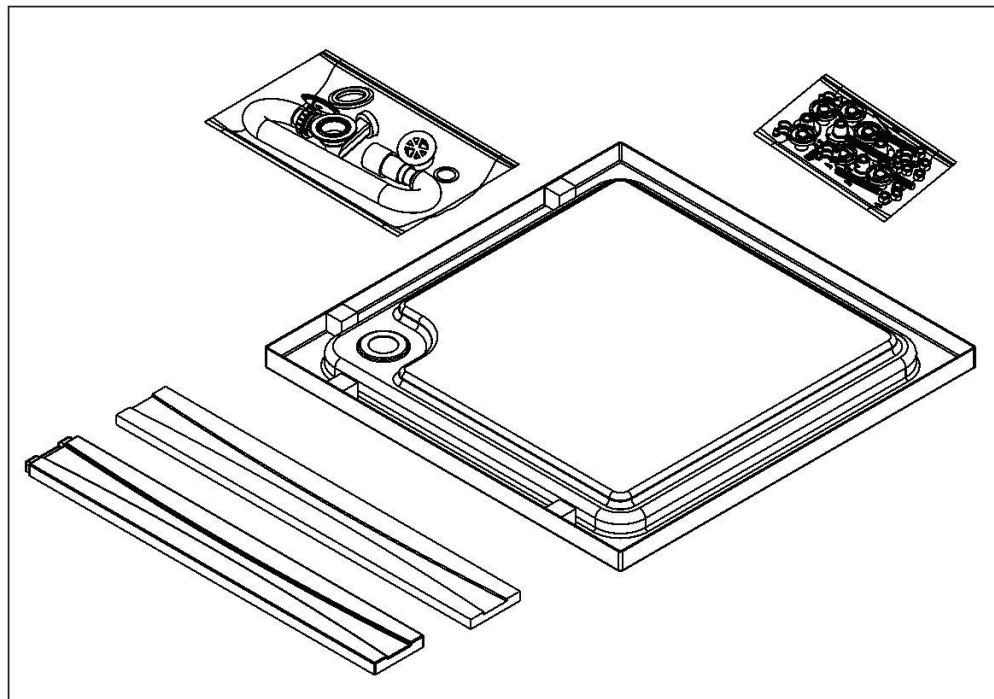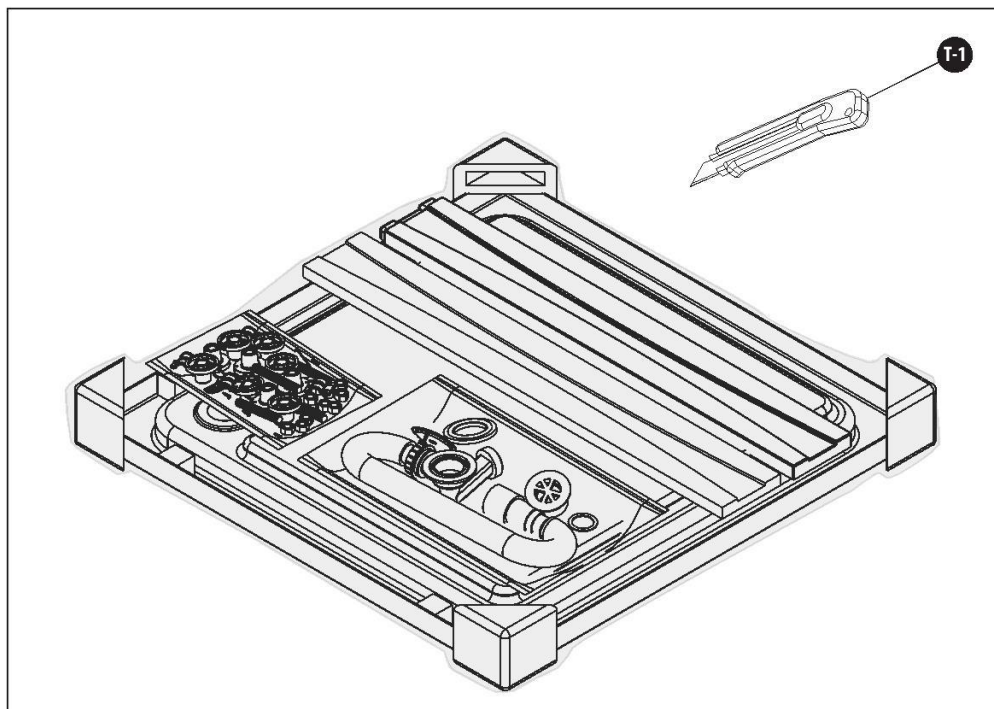



No: 1

M12 x7,5 cm



5x

No: 2

M12




10x

No: 3




10x

No: 4




23x

No: 5








4x



No: 6




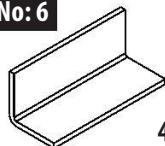



4x

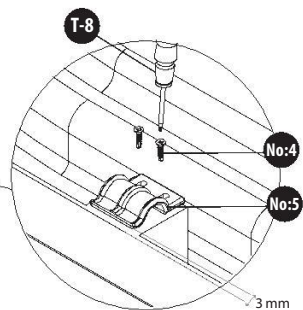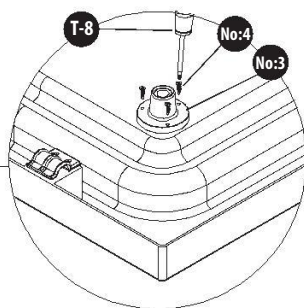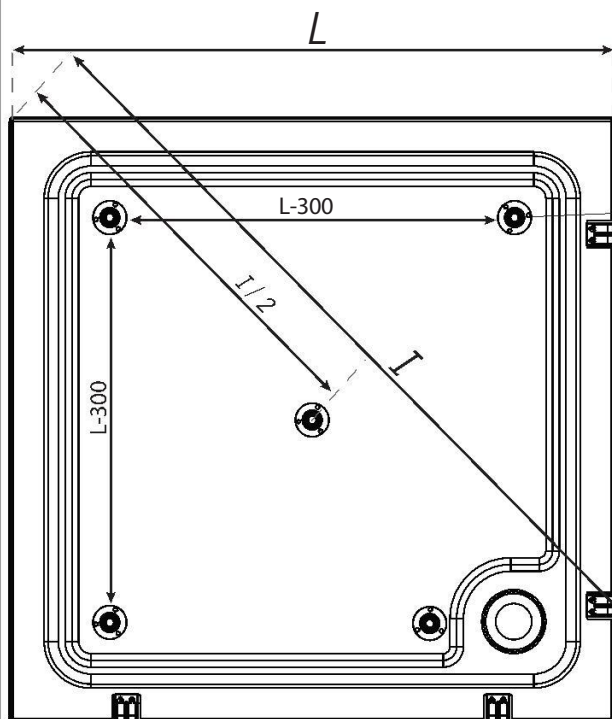

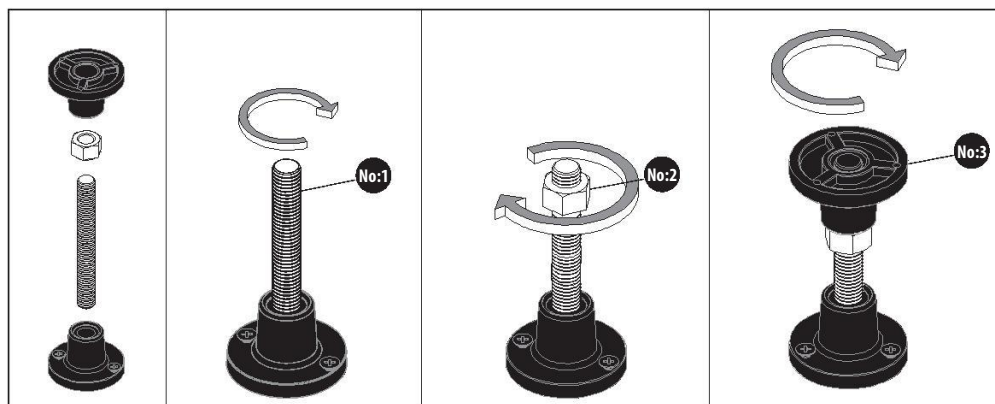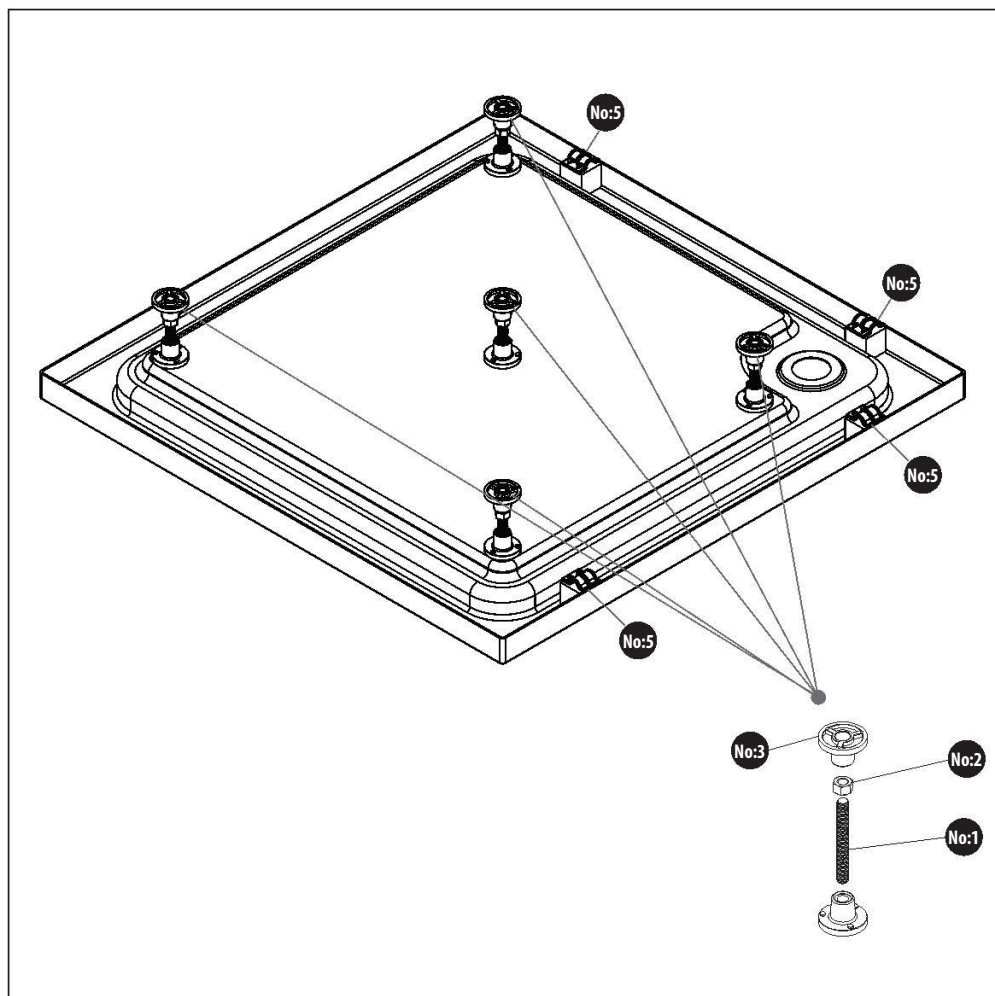


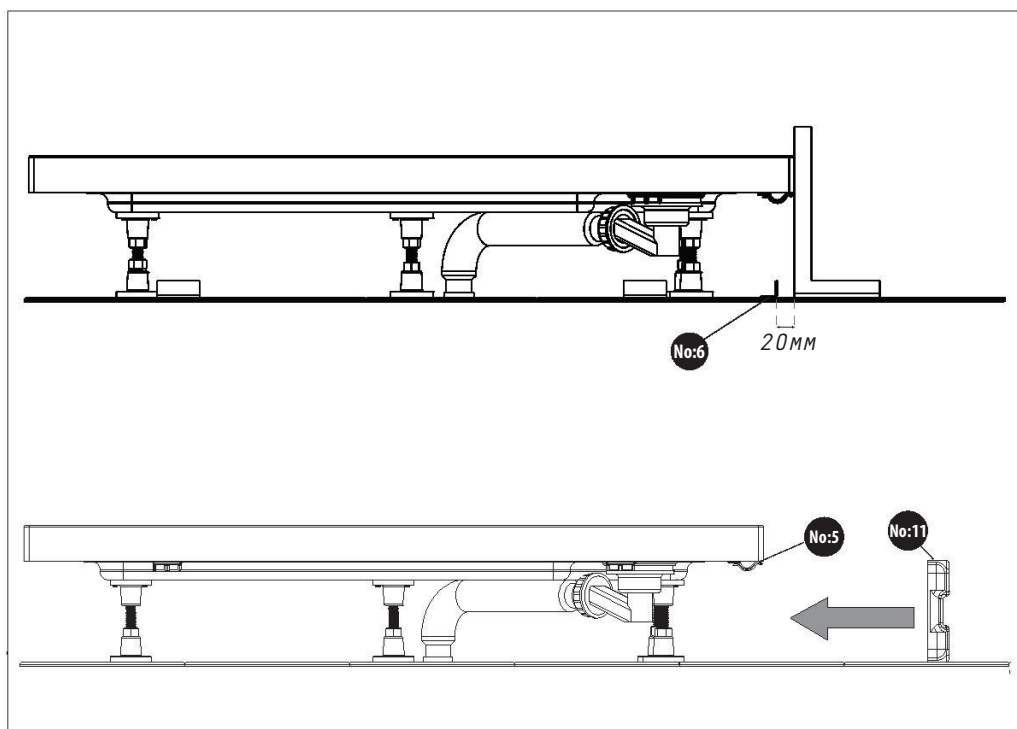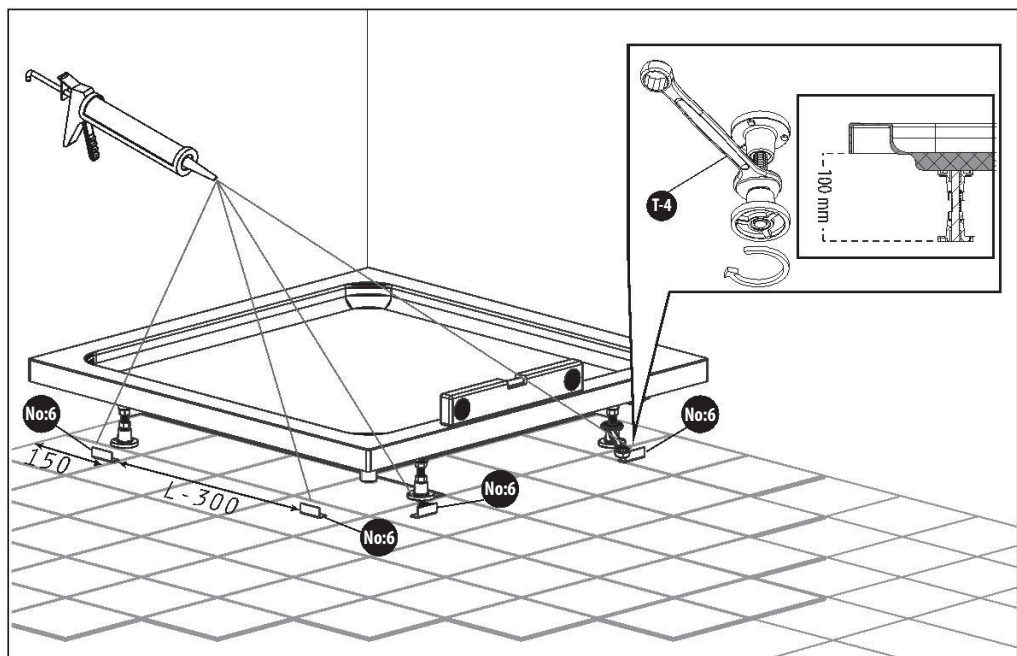

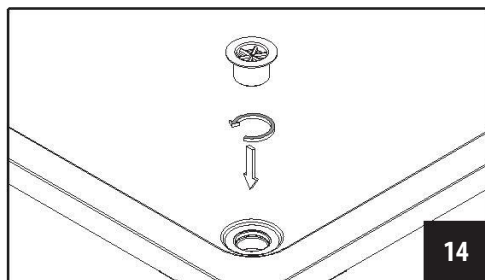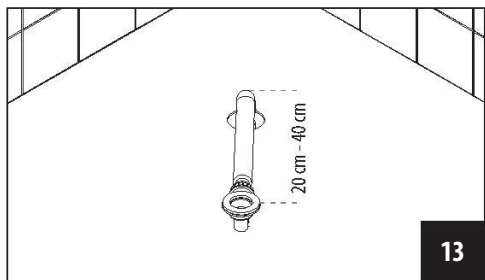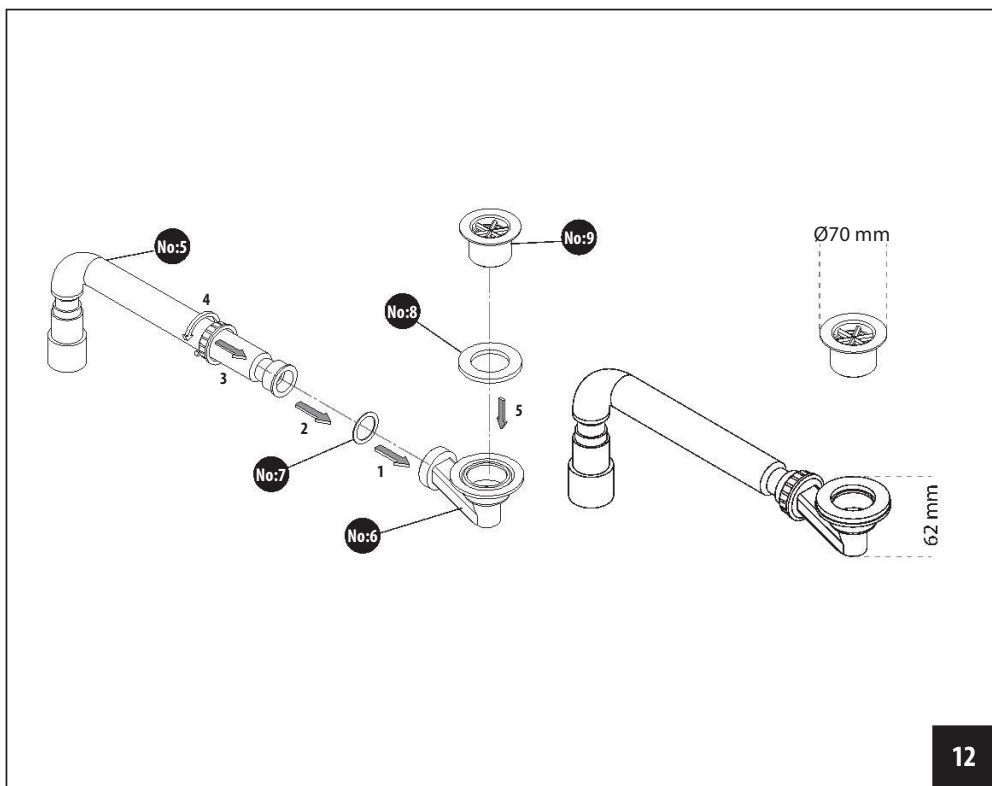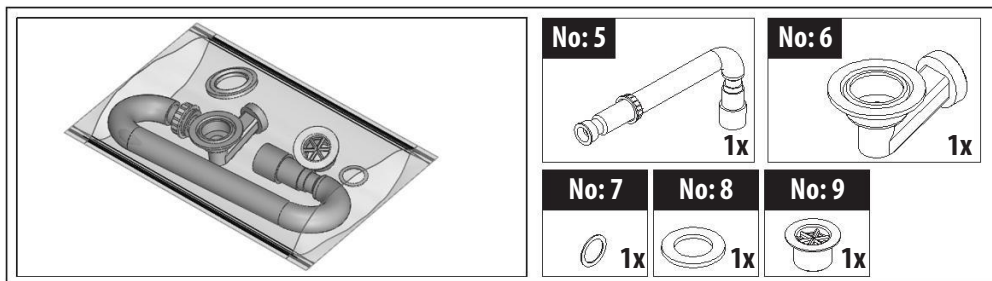

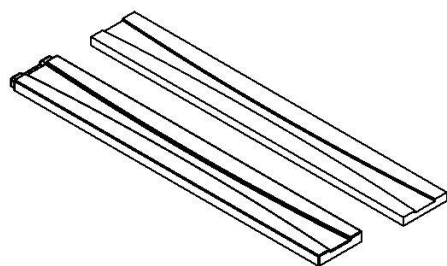

No: 13

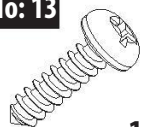

1x

No: 14



1x

