

Contempo



8508 SN White North Wood







8547 SN Finition Crème







K080 PW White Coastland Oak











K088 PW White Nordic Wood
















K010 SN White Loft Pine









K011 SN Cream Loft Pine









5529 SN Oregon






K022 SN Satin Blackwood












K083 SN Light Artwood











K084 SN Dark Artwood






K089 PW Grey Nordic Wood










K079 PW Grey Clubhouse Oak






K085 PW Light Rockford Hickory









K107 PW Elegance Endgrain Oak









K081 PW Satin Coastland Oak









K105 PW Raw Endgrain Oak












K086 PW Natural Rockford Hickory





5501 SN Slavonia Oak













5527 SN Stone Oak

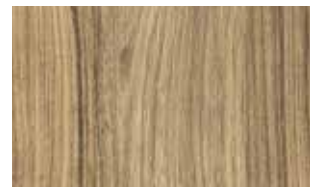





K021 SN Barley Blackwood















K087 PW Dark Rockford Hickory











K082 PW Bourbon Oak

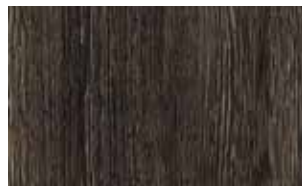





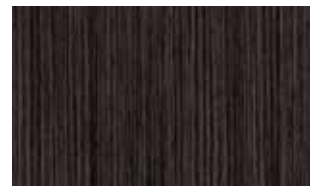

7648 SN Vintage Wenge



8548 SN Finition Mocca










4298 SU Light Atelier












K108 SU Peltro







4299 SU Dark Atelier







8509 SN Black North Wood





The image reproduction is in scale 1 to 2.

For samples, more product information or technical specification, please contact your local Kronospan company or visit our web page kronospan-express.com.