


Suno™ Loud-speaker socket Cat. No(s): 7 211 92, 7 212 92

7 213 92, 7 214 92

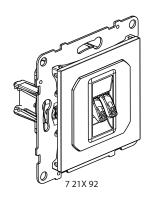


## 1. USE

For connecting a loud-speaker.


## 2. RANGE

Description	White	lvory	Aluminum	Black
LOUDSPEAKER SOCKET	7 211 92	7 212 92	7 213 92	7 214 92

# 3. DISMANTLING

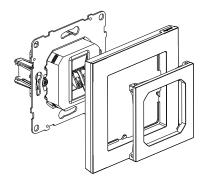

# 4. DIMENSIONS (mm)

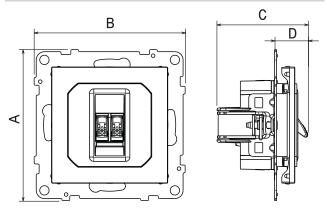

References	Α	В	С	D
7 21X 02/12	72,9	72,9	43,8	16,1

## 5. CONNECTION

Screw terminals

Capacity:

2 x 6 mm<sup>2</sup>

Stripping length:

6 mm

Recommended cable: audio cable 2 x 6 mm<sup>2</sup> max.

#### Cat. No(s): 7 211 92, 7 212 92 7 213 92, 7 214 92

## **6. TECHNICAL CHARACTERISTICS**

#### ■ 6.1 Mechanical characteristics

Protection against solid bodies and liquids: IP 41 Protection against impact: IK 04

#### ■ 6.2 Material characteristics

Colour molded:

- White RAL 9003 - Ivory RAL 1013

Matt colour painted:

- Aluminum RAL 9023 - Black RAL 9017

#### Material:

- Base: Polycarbonate

- Cover: ABS white (RAL 9003) or mat black


Self-extinguishing: 650°C/30 s

#### ■ 6.3 Climate characteristics

Usage temperature: -  $5^{\circ}$ C to +  $35^{\circ}$ C Storage temperature: -  $10^{\circ}$ C to +  $70^{\circ}$ C

#### ■ 6.4 Support


Material of support: -Metal Angular adjusting:

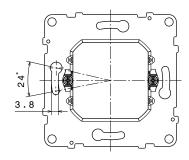

#### ■ 6.5 Fixing with claws

Number of turns to open the claws:

- 58 mm > 2,1 turns
- 65 mm > 2,75 turns



## 7. MAINTENANCE

Surface cleaning with a cloth.

Do not use:

Acetone, tar remover, trichloroethylene.

Maintenance with the following products:

Hexane (EN 60669-1), Methylated spirit, Soapy water, Diluted ammonia, Bleach diluted to 10%, Window-cleaning products, Pre-Impregnated-wipes.

Resistance to hospital-type cleaning agents

Resistance to the following agents: Anios, Surfanios, Bactilysine, Diluted hydrogen peroxide (35%)

**Caution:** Always test before using other special cleaning products.

#### 8. STANDARDS AND APPROVALS

Compliant with installation and manufacturing standards. See e-catalogue.